



716.285.7502 USA 905.685.7223 CAN

WWW.BICKNELLRACINGPRODUCTS.COM

GREASE FITTING INSTALLATION BRP 9297

INSTALL GREASE FITTING ON THE BACKSIDE OF THE BEARING CUP TO KEEP ROCKS, DIRT AND ANY FLYING DEBRIS FROM DAMAGING IT



1) MEASURE IN 1/2" FROM THE OUTSIDE OF THE BEARING CUP.

2) CENTER PUNCH

3) DRILL A 7/32 HOLE

4) TAP TO 1/4-28 (FINE THREAD)

5) DE-BURR HOLE ON THE INSIDE AND OUTSIDE

6) INSTALL GREASE FITTING

7) INSTALL BEARING AND SNAP RING