


BRP 9526

INSTRUCTION SHEET

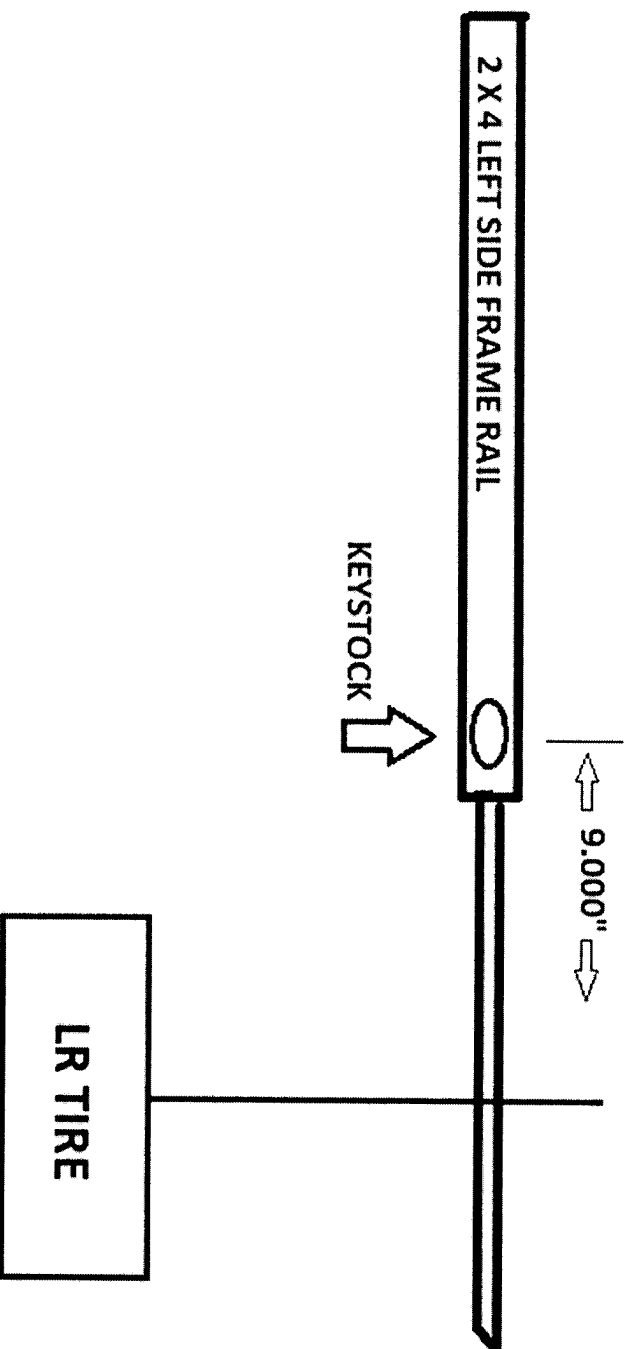

THE TOOL IS DESIGNED TO READ WITH THE PLASTIC ROD TOUCHING THE REAREND TUBE.

IF YOU HAVE ADJUSTABLE BRIDGACES, YOU WILL HAVE TO TRIM OFF THE END OF THE PLASTIC ROD TO COMPENSATE FOR THE THICKNESS OF THE CENTER HUB OF THE BIRDGAGE.

THE BEST WAY TO CHECK ACCURACY IS TO SET YOUR CAR UP, MEASURE WITH A TAPE MEASURE AND THEN TRIM THE LENGTH OF THE PLASTIC ROD ON YOUR NEW TOOL SO THAT THE MEASUREMENT ON THE TOOL MATCHES YOUR ORIGINAL MEASUREMENT THAT YOU MADE WITH THE TAPE MEASURE.